




33 Boulder Blvd. Stony Plain, AB 780-963-8930

## **Sky Drive Wiring Diagrams**

(3 Pages)

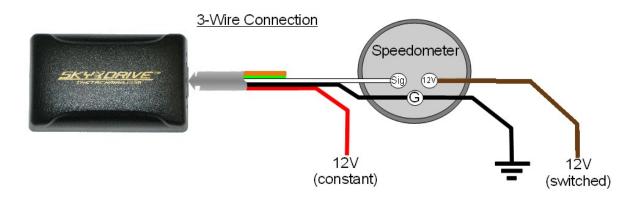


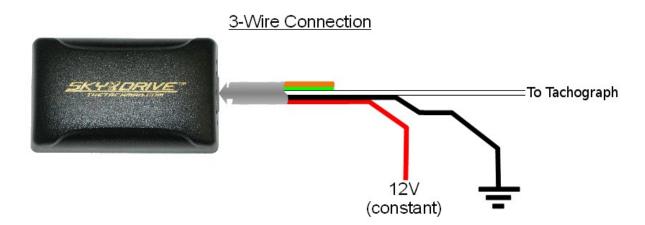


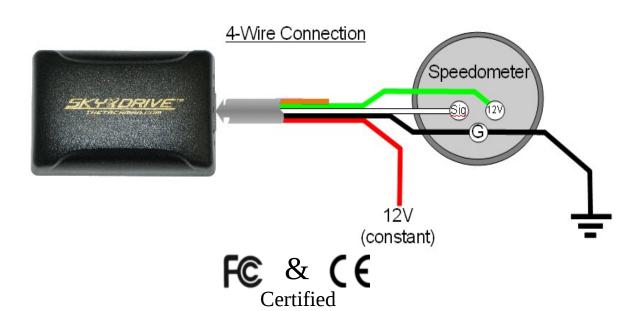


## CAINSTRUMENTS

33 Boulder Blvd. Stony Plain, AB 780-963-8930

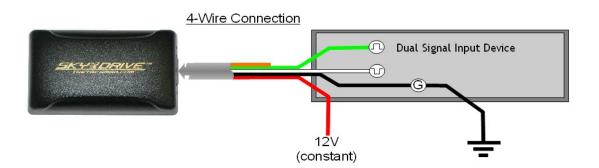

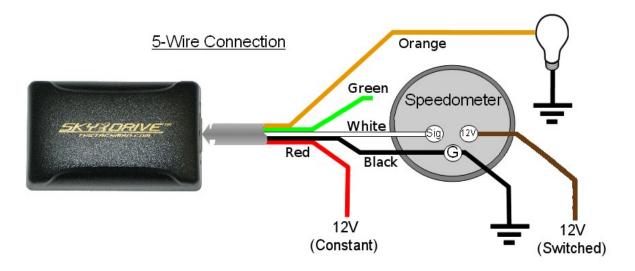

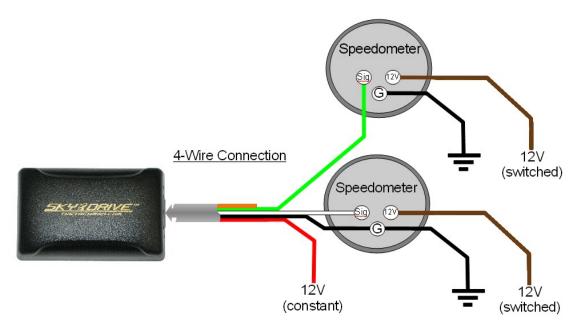







33 Boulder Blvd. Stony Plain, AB 780-963-8930

## SKY DRIVE® CRUISE CONTROL CONNECTION SCHEMATIC

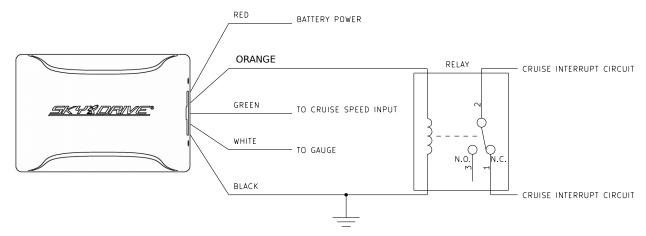

AS A SAFETY FEATURE, THE SKY DRIVE IS DESIGNED TO TURN OFF THE VEHICLE'S CRUISE CONTROL IN THE EYENT OF A LOST GPS SIGNAL. A TWO-SECOND, 12-VOLT PULSE IS PROVIDED ON THE BROWN WIRE TO DRIVE A RELAY COIL, WHICH MUST BE WIRED INTO THE VEHICLE'S CRUISE CONTROL INTERRUPT CIRCUIT.

## SkyFence™ CONNECTION SCHEMATIC

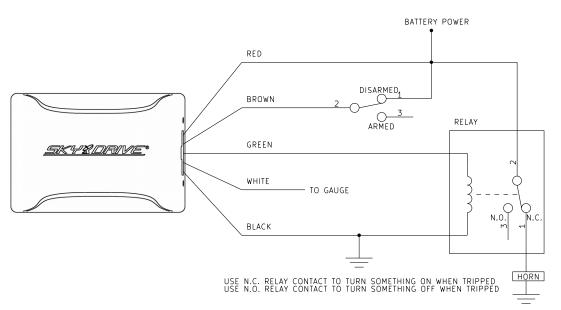

IF THE BROWN WIRE IS CUT, THE SKY DRIVE IS ARMED BY DEFAULT
IF THE GREEN/BLACK/RED WIRES ARE CUT, THE SKY DRIVE IS TRIPPED BY DEFAULT

